



## Easy User Guide;

### Vaillant VRC 430 – mounted in boiler facia

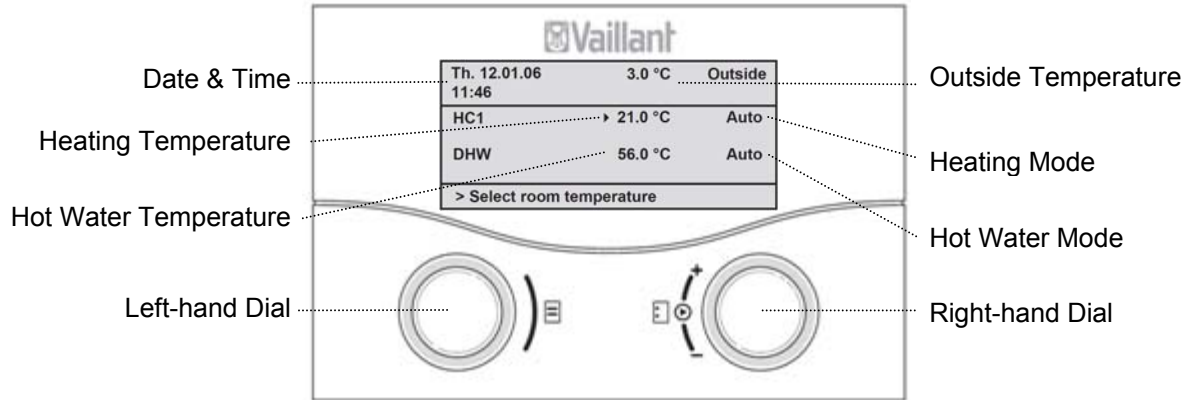

## Changing Room Temperature



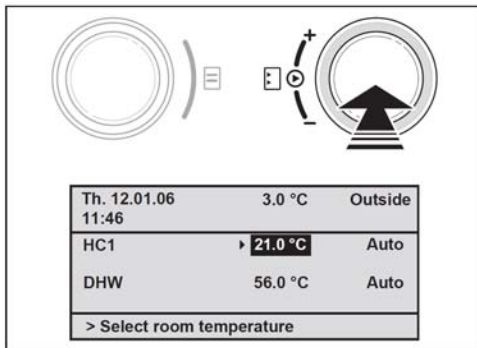

The following steps will change the current room temperature.



- Turn the **right-hand dial clockwise** until the flashing cursor ► marks the heating temperature.
- Press the **right-hand dial**. The current room temperature will be highlighted (as shown).
- Turn the **right-hand dial clockwise or anti-clockwise** until the desired room temperature is displayed.
- Press the **right-hand dial** again to accept the new heating temperature.

## Selecting Operating Mode


Turn the **left-hand dial clockwise** or **anti-clockwise** to move through the different display screens. Turn the **right-hand dial clockwise** or **anti-clockwise** to move the cursor around the display. The current position is indicated by the cursor ►. Press the **right-hand dial** to highlight and change the setting, press again to accept the change.

<b>Auto</b>	Heating and hot water follow the <b>Time and temperature Programmes already set in the control</b> . These are programmed into menu screens  2 heating and  4 hot water.
<b>Manual</b>	Heating and hot water are <b>on</b> constantly and the temperature is controlled according to those programmed into menu screens  2 heating and  4 hot water.
<b>Off</b>	Heating and/or hot water are <b>off</b> . Frost protection is active.

## Easy User Guide;

### Vaillant VRC 430 – mounted in boiler facia

## Setting Time and Temperature Programmes

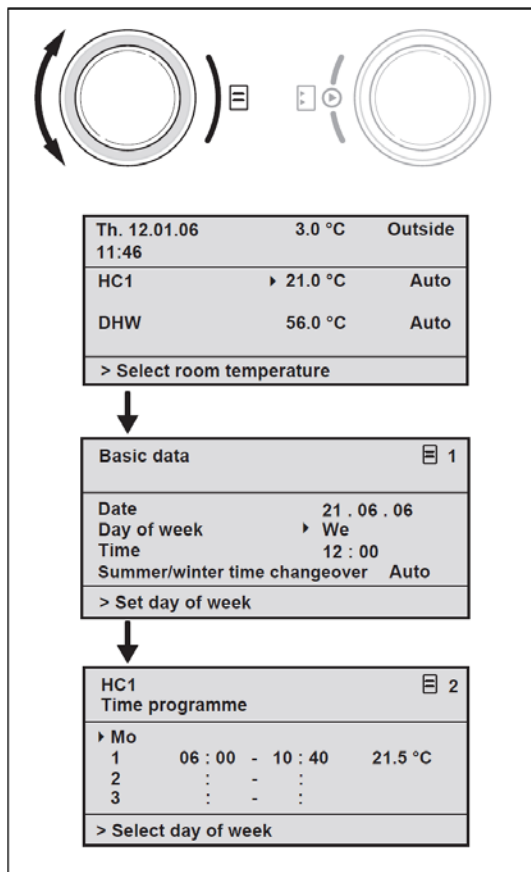

- Turn the **left-hand** dial to move through the screens until you reach the screen that you need to change.
- Turn the **right hand** dial to move to the cursor ► to the setting on the screen you need to change. Use the following sequence for any changes to the control settings:
  - Press to select (setting is highlighted)
  - Turn to change to required setting.
  - Press to accept setting (highlight clears)

Once all times and temperatures have been set as required - simply leave the control to revert to the normal display screen.

For more advanced functions and settings please refer to the operating and installation manual.